


Let's get your DIY done.
This will be easy.

FREEDOM[®]
OUTDOOR LIVING


6X6 EVERTON - WHITE

- 6 in. tongue & groove boards
- 2-¼ in. x 7 in. top & bottom rails

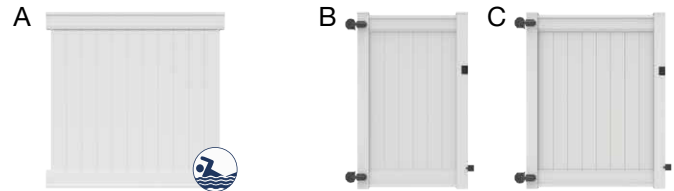

Panel and Gates	Actual Size	Model#	SOS#
A 6x6 Everton Privacy Fence Kit - White (FF)	70in. H x 70in. W	73024827	701364
B Everton Privacy 4' Gate Kit - White (hinges included)†	71.5in. H x 46in. W	73024881	779486
C Everton Privacy 5' Gate Kit - White (hinges included)†	71.5in. H x 58in. W	73024882	779487

Posts and Accessories	Model#	SOS#
D 5in. x 5in. x 96in. Line Post - White (FF)	73049050	3351765
E 5in. x 5in. x 96in. Corner Post - White (FF)	73049063	3351766
F 5in. x 5in. x 96in. End Post - White (FF)	73049112	3351767
G 5in. x 5in. x 94in. Post Insert*	73012353	430375
H 5in. x 5in. Contemporary Post Top - White	73013956	428791
I 4 oz. Tube Vinyl Adhesive	73047688	1966202

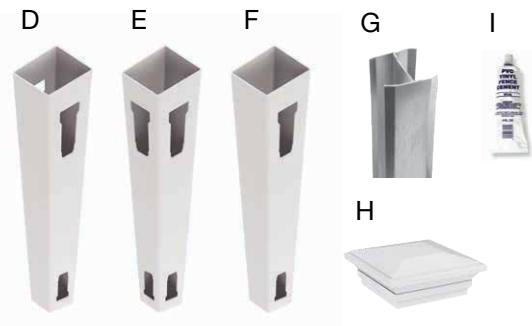


*Required support for gate posts and strength for hardware connections.

How to calculate fence materials:

1. Determine total number of lineal feet and subtract footage for gates
2. Calculate # of fence panels needed: Total lineal feet divided by panel width (feet) = total # of panels
Note: panels can be cut to shorter width if necessary
3. Calculate # of posts needed:
 - 1 post per panel + 1 end post to end the fence run
 - 1 end/gate post per gate (don't forget 2 post inserts for each gate)

Key:

- Line posts – use when connecting fence panels in a straight line
- Corner posts – use when connecting fence panels at a 90 degree angle
- End posts – use when ending a fence run or on either side of a gate
- Fence panels

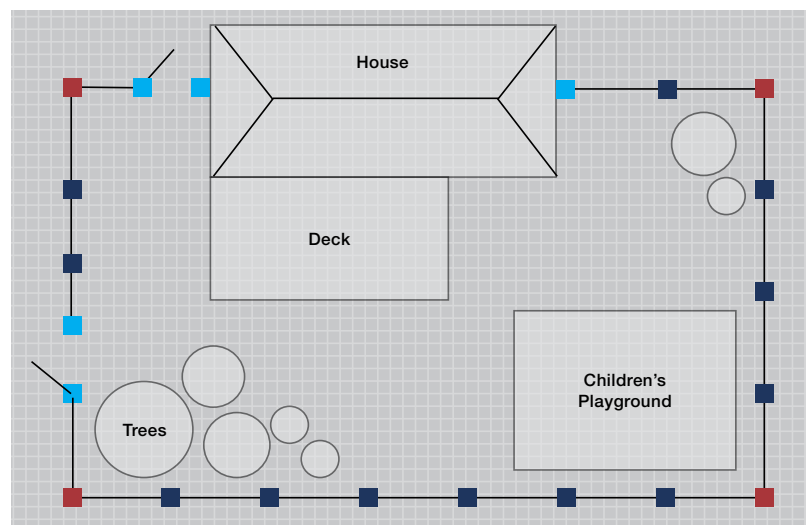

Check with local building department for code requirements