


Let's get your DIY done.
This will be easy.

FREEDOM[®]
OUTDOOR LIVING




4X8 CONWAY - WHITE

- 6 in. tongue & groove boards
- 2 in. x 3-½ in. top rail
- 1-¾ in. x 5-½ in. middle & bottom rail

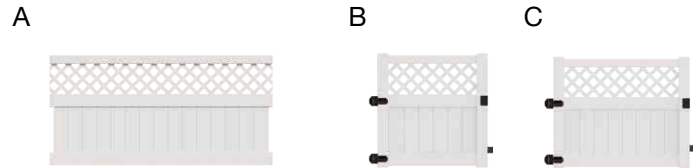

Panel and Gates	Actual Size	Model #	SOS#
A 4x8 Conway Privacy Fence Kit - White (EH)	46in. H x 94in. W	73025149	819016
B Conway 4' Gate Kit - White (hinges included)†	47.5in. H x 46in. W	73025153	819017
C Conway 5' Gate Kit - White (hinges included)†	47.5in. H x 58in. W	73025154	819018

Posts and Accessories	Model #	SOS#
D 5in. x 5in. x 84in. Line Post - White (EH)	73025150	819022
E 5in. x 5in. x 84in. Corner Post - White (EH)	73025152	819024
F 5in. x 5in. x 84in. End Post - White (EH)	73025151	819023
G 5in. x 5in. x 82in. Post Insert*	73003718	430373
H 5in. x 5in. New England Top - White	73045003	1870861
I 4 oz. Tube Vinyl Adhesive	73047688	1966202

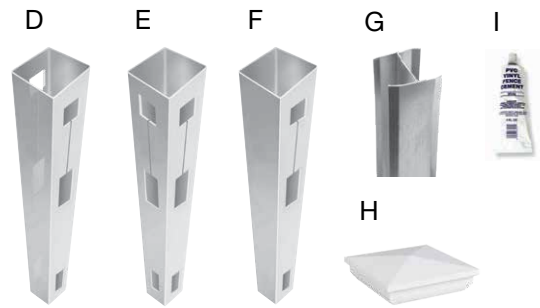


*Required support for gate posts and strength for hardware connections.

How to calculate fence materials:

1. Determine total number of lineal feet and subtract footage for gates
2. Calculate # of fence panels needed: Total lineal feet divided by panel width (feet) = total # of panels
Note: panels can be cut to shorter width if necessary
3. Calculate # of posts needed:
 - 1 post per panel + 1 end post to end the fence run
 - 1 end/gate post per gate (don't forget 2 post inserts for each gate)

Key:

- Line posts – use when connecting fence panels in a straight line
- Corner posts – use when connecting fence panels at a 90 degree angle
- End posts – use when ending a fence run or on either side of a gate
- Fence panels

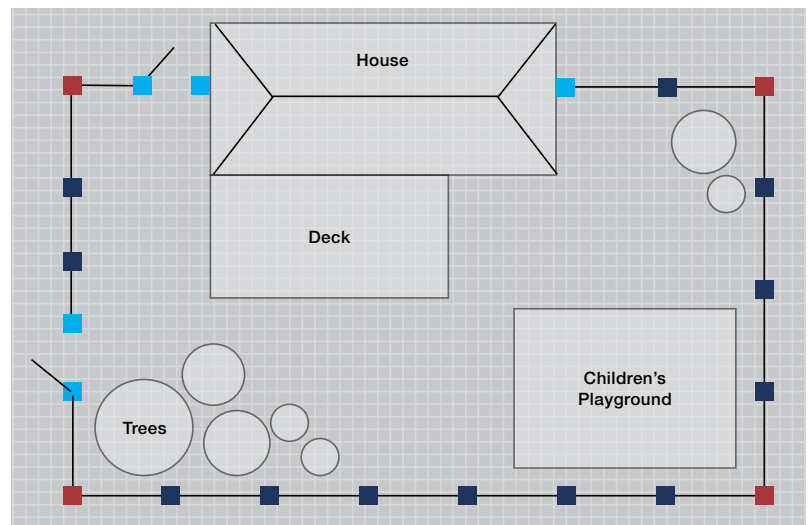

Check with local building department for code requirements