


Let's get your DIY done.
This will be easy.

FREEDOM[®]
OUTDOOR LIVING


6X8 WAKEFIELD - WHITE

- 6 in. tongue & groove boards
- 2 in. x 3-1/2 in. top rail
- 1-3/4 in. x 7 in. middle & bottom rails
- 14 day lead time

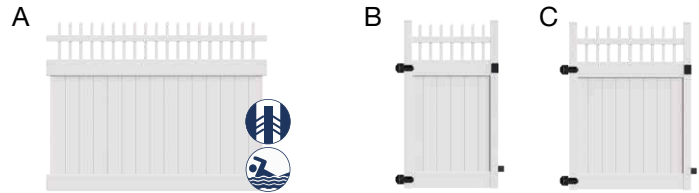

Panel and Gates	Actual Size	Model #	SOS#
A 6x8 Wakefield Open Top Fence Kit - White (DK)	72in. H x 94in. W	73040126	1259456
B Wakefield 4' Gate Kit - White (hinges included)†	73.5in. H x 46in. W	73040130	1259460
C Wakefield 5' Gate Kit - White (hinges included)†	73.5in. H x 58in. W	73040131	1259461

Posts and Accessories	Model #	SOS#
D 5in. x 5in. x 108in. Line Post - White (DK)	73040127	1259457
E 5in. x 5in. x 108in. Corner Post - White (DK)	73040128	1259458
F 5in. x 5in. x 108in. End Post - White (DK)	73040129	1259459
G 5in. x 5in. x 106in. Gate Post Insert*	73041348	1143443
H 5in. x 5in. Contemporary Post Top - White	73013956	428791
I 4 oz. Tube Vinyl Adhesive	73047688	1966202

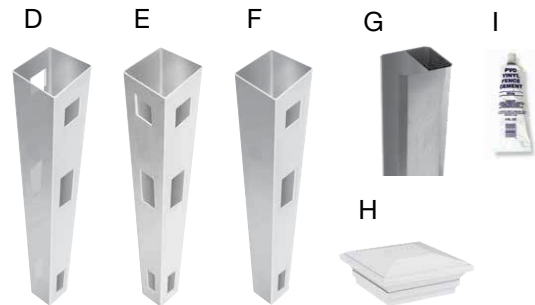


*Required support for gate posts and strength for hardware connections.

How to calculate fence materials:

1. Determine total number of lineal feet and subtract footage for gates
2. Calculate # of fence panels needed: Total lineal feet divided by panel width (feet) = total # of panels
Note: panels can be cut to shorter width if necessary
3. Calculate # of posts needed:
 - 1 post per panel + 1 end post to end the fence run
 - 1 end/gate post per gate (don't forget 2 post inserts for each gate)

Key:

- Line posts – use when connecting fence panels in a straight line
- Corner posts – use when connecting fence panels at a 90 degree angle
- End posts – use when ending a fence run or on either side of a gate
- Fence panels

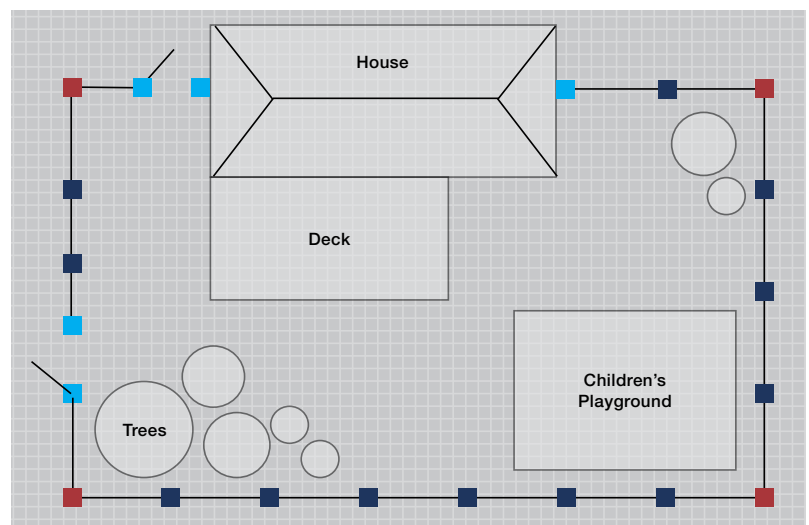

Check with local building department for code requirements