


Let's get your DIY done.
This will be easy.

FREEDOM[®]
OUTDOOR LIVING


6X6 OAKWORTH - WHITE

- 6 in. boards with 1" spacing
- 2 in. x 6 in. top and bottom rails
- 2 in. x 3-½ in. middle rail
- 14 day lead time

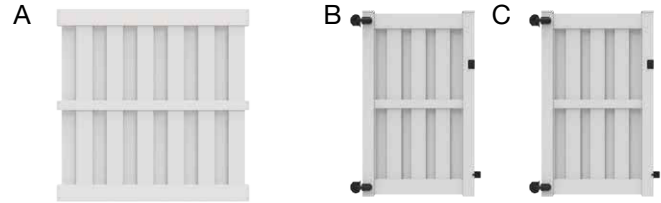

Product Description	Actual Size	Model #	SOS#
A 6x6 Oakworth Shadowbox Fence Kit - White (AN)	70in. H x 70in. W	73045694	1944630
B Oakworth Shadowbox 4' Gate Kit - White (hinges included)†	71.5in. H x 46in. W	73047008	1971153
C Oakworth Shadowbox 5' Gate Kit - White (hinges included)†	71.5in. H x 58in. W	73047009	1971154

Posts and Accessories	Model #	SOS#
D 5in. x 5in. x 102in. Line Post - White (AN)	73046999	1944631
E 5in. x 5in. x 102in. Corner Post - White (AN)	73047000	1944632
F 5in. x 5in. x 102in. End Post - White (AN)	73047001	1944633
G 5in. x 5in. x 94in. Post Insert*	73012353	430375
H 5in. x 5in. New England Top - White	73045003	1870861
I 4 oz. Tube Vinyl Adhesive	73047688	1966202

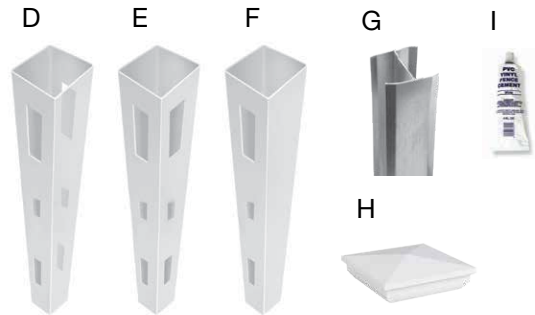


*Required support for gate posts and strength for hardware connections.

How to calculate fence materials:

1. Determine total number of lineal feet and subtract footage for gates
2. Calculate # of fence panels needed: Total lineal feet divided by panel width (feet) = total # of panels
Note: panels can be cut to shorter width if necessary
3. Calculate # of posts needed:
 - 1 post per panel + 1 end post to end the fence run
 - 1 end/gate post per gate (don't forget 2 post inserts for each gate)

Key:

- Line posts – use when connecting fence panels in a straight line
- Corner posts – use when connecting fence panels at a 90 degree angle
- End posts – use when ending a fence run or on either side of a gate
- Fence panels

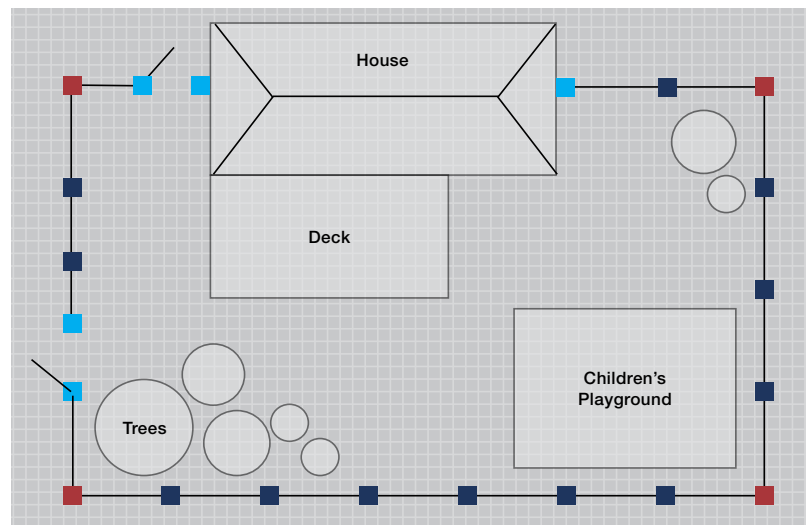

Check with local building department for code requirements