



Let's get your DIY done.
This will be easy.

FREEDOM[®]
OUTDOOR LIVING

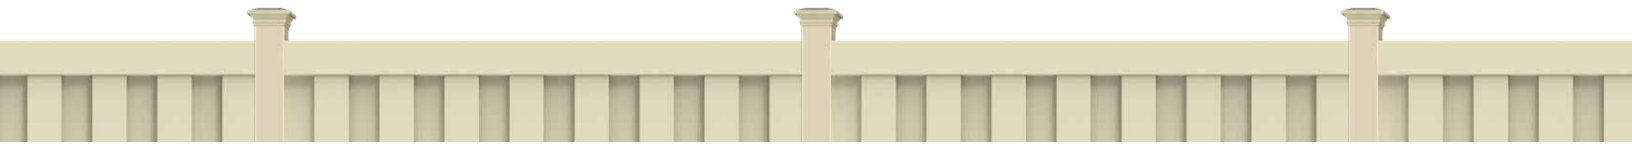

6X8 BIRCHDALE - SAND


- 6 in. boards with 1" spacing
- 2 in. x 6 in. top and bottom rails
- 2 in. x 3-½ in. middle rail
- 14 day lead time

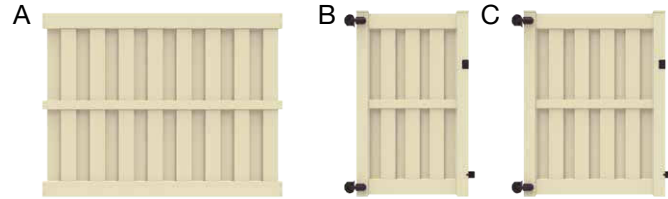

Panel and Gates	Actual Size	Model #	SOS#
A 6x8 Birchdale Shadowbox Fence Kit - Sand (N)	72in. H x 94in. W	73045697	1944626
B Birchdale Shadowbox 4' Gate Kit - Sand (hinges included)†	73.5in. H x 46in. W	73045699	1944640
C Birchdale Shadowbox 5' Gate Kit - Sand (hinges included)†	73.5in. H x 58in. W	73045700	1944641

Posts and Accessories	Model #	SOS#
D 5in. x 5in. x 108in. Line Post - Sand (N)	73011424	1944627
E 5in. x 5in. x 108in. Corner Post - Sand (N)	73011425	1944628
F 5in. x 5in. x 108in. End Post - Sand (N)	73011426	1944629
G 5in. x 5in. x 106in. Gate Post Insert*	73041348	1143443
H 5in. x 5in. New England Post Top - Sand	73045004	1944650
I 4 oz. Tube Vinyl Adhesive	73047688	1966202

*Required support for gate posts and strength for hardware connections.

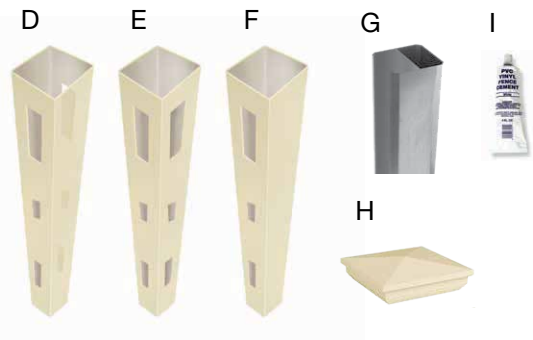


How to calculate fence materials:

1. Determine total number of lineal feet and subtract footage for gates
2. Calculate # of fence panels needed: Total lineal feet divided by panel width (feet) = total # of panels
Note: panels can be cut to shorter width if necessary
3. Calculate # of posts needed:
 - 1 post per panel + 1 end post to end the fence run
 - 1 end/gate post per gate (don't forget 2 post inserts for each gate)

Key:

- Line posts – use when connecting fence panels in a straight line
- Corner posts – use when connecting fence panels at a 90 degree angle
- End posts – use when ending a fence run or on either side of a gate
- Fence panels

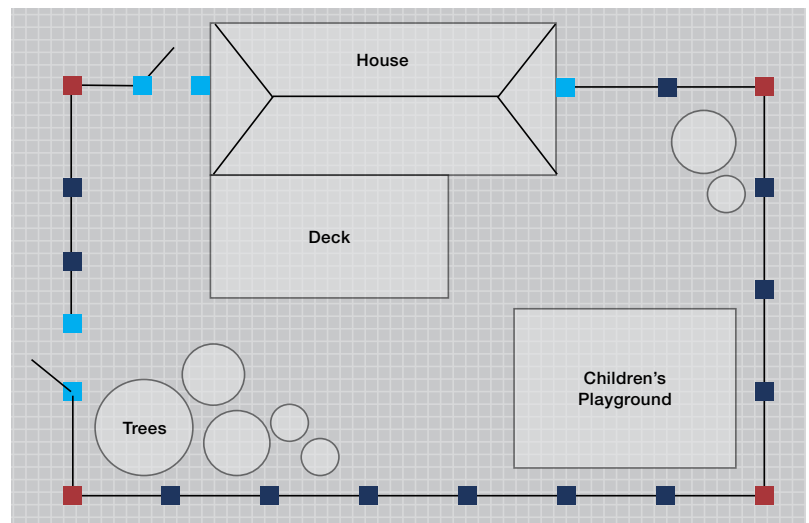

Check with local building department for code requirements