


Let's get your DIY done.  
This will be easy.

**FREEDOM**<sup>®</sup>  
OUTDOOR LIVING




## 6X6 NEWBECK BOARDWALK - DRIFTWOOD

- 6 in. tongue & groove boards
- 1-<sup>3</sup>/<sub>4</sub> in. x 7 in. top & bottom rails

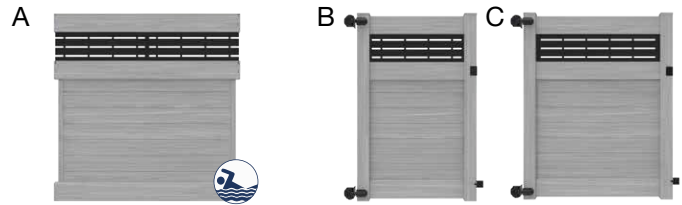

Product Description	Actual Size	Model #	SOS#
<b>A 6x6 Newbeck Boardwalk Horizontal Fence Panel Kit - Driftwood (Al)</b>	<b>70.5in. H x 70in. W</b>	<b>73045803</b>	<b>4968166</b>
B Newbeck Horizontal 4' Gate Kit - Driftwood (hinges included)†	70.5in. H x 46in. W	73045825	4968170
C Newbeck Horizontal 5' Gate Kit - Driftwood (hinges included)†	70.5in. H x 58in. W	73045826	4968171

Posts and Accessories	Model #	SOS#
D 5in. x 5in. x 108in. Line Post - Driftwood (Al)	73045821	4968167
E 5in. x 5in. x 108in. Corner Post - Driftwood (Al)	73045822	4968168
F 5in. x 5in. x 108in. End Post - Driftwood (Al)	73045823	4968169
G 5in. x 5in. x 106in. Gate Post Insert*	73041348	1143443
H 5in. x 5in. New England Top - Driftwood	73042811	1259480
I 4 oz. Tube Vinyl Adhesive	73047688	1966202

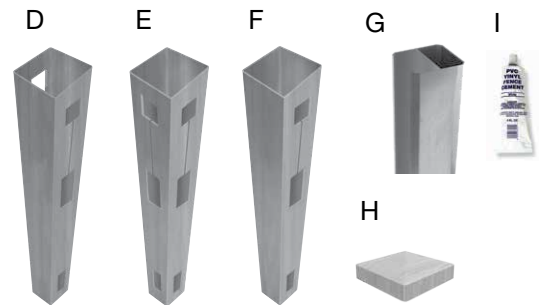


\*Required support for gate posts and strength for hardware connections.

## How to calculate fence materials:

1. Determine total number of lineal feet and subtract footage for gates
2. Calculate # of fence panels needed: Total lineal feet divided by panel width (feet) = total # of panels  
**Note:** panels can be cut to shorter width if necessary
3. Calculate # of posts needed:
  - 1 post per panel + 1 end post to end the fence run
  - 1 end/gate post per gate (don't forget 2 post inserts for each gate)

### Key:

- Line posts – use when connecting fence panels in a straight line
- Corner posts – use when connecting fence panels at a 90 degree angle
- End posts – use when ending a fence run or on either side of a gate
- Fence panels

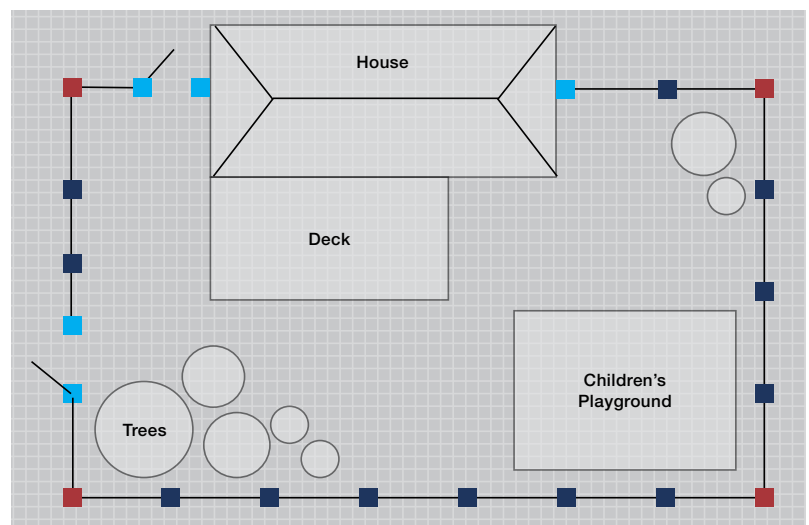

Check with local building department for code requirements