


Let's get your DIY done.
This will be easy.

FREEDOM[®]
OUTDOOR LIVING


6X6 SHADOWBOX - WHITE

- 6 in. boards with 4-1/2 in. spacing
- 1-3/4 in. x 2-3/4 in. rails
- 14 day lead time

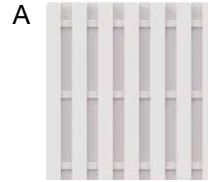

Panel	Actual Size	Model #	SOS#
A 6x6 Shadowbox - White	70in. H x 68.25in. W	73048535	3159353

Posts and Accessories	Model #	SOS#
B 5in. x 5in. x 96in. Post - White	73013947	261012
C 5in. x 5in. Gothic Post Top - White	73003094	385321
D 2pk. Aluminum Bracket Kit- White (screws included)	73013963	426056
E 4 oz. Tube Vinyl Adhesive	73047688	1966202
F Gate Framing Kit - White (hinges and latch included)	73013824	226837
G 5in. x 5in. x 94in. Post Insert*	73012353	430375

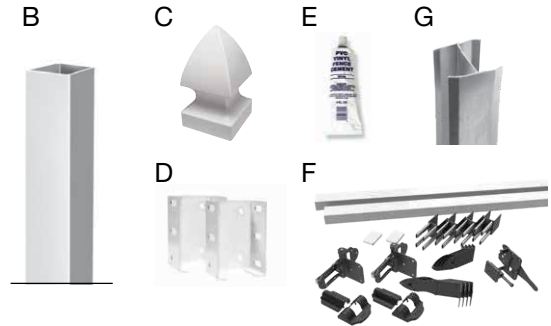


*Required support for gate posts and strength for hardware connections.

How to calculate fence materials:

1. Determine total number of lineal feet and subtract footage for gates
2. Calculate # of fence panels needed: Total lineal feet divided by panel width (feet) = total # of panels
Note: panels can be cut to shorter width if necessary
3. Calculate # of posts needed:
 - 1 post per panel + 1 end post to end the fence run
 - 1 end/gate post per gate (don't forget 2 post inserts for each gate)

Key:

- Line posts – use when connecting fence panels in a straight line
- Corner posts – use when connecting fence panels at a 90 degree angle
- End posts – use when ending a fence run or on either side of a gate
- Fence panels

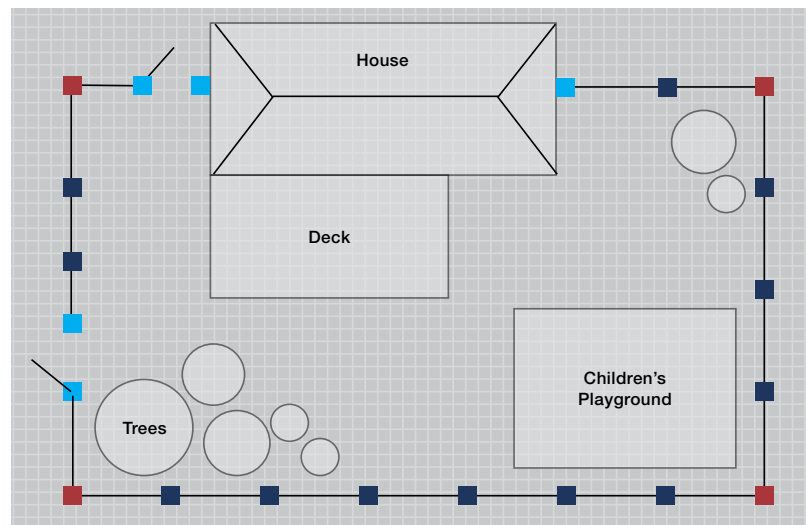

Check with local building department for code requirements